

MODEL 171.4 up to Model Year 8

	Vario roof (VD), function		GF77.30-P-0001SK
	Vario roof (VR), location of components		GF77.30-P-0001-04SK
	Vario roof (VR), block diagram		GF77.30-P-0001-05SK
	Open/close Vario roof, function		GF77.30-P-2004SK
	Vario roof convenience opening/closing with transmitter key, function	With code (880a) Closing system with infrared remote control	GF77.30-P-2100SK
	Subsequently locking Vario roof, function		GF77.30-P-3004SK
	Vario roof stop mode, function		GF77.30-P-3005SK
	Temperature limits for hydraulic component for Vario roof, function		GF77.30-P-3006SK
	Vario roof indicator warning messages, function		GF77.30-P-4000SK
	Automatic raising/lowering of power windows depending on Vario roof control, function		GF72.29-P-4007SK
	Survey of system components for Vario roof (VR), location/task/design/function		GF77.30-P-9998SK