



A1	Instrument cluster
A9	A/C compressor
A9x1	A/C compressor connector
A32	A/C system blower unit
A32m1	Blower motor
A32n1	Blower regulator
B10/1	Heater core temperature sensor
B10/6	Evaporator temperature sensor
B10/6x1	Evaporator temperature sensor connector
B12	Refrigerant pressure sensor
F1	Fuse and relay box
F1f15	Fuse 15
F1f33	Fuse 33
F1f35	Fuse 35
F1f36	Fuse 36
F1f37	Fuse 37
F1fM4	Maxi-Fuse M4

F31	Fuse box (battery)
F31f2	Fuse 2
M4/3	Engine/climate control electric cooling fan
M13	Coolant circulation pump
N3/10	Engine control module (ME-SFI)
N10-3	Combination control module
N19	A/C pushbutton control module
N76	Engine/climate control electric cooling fan control module
W1/1	Ground (cockpit frame)
W35	Ground (left front spring tower)
X11/4	Data link connector (DTC readout)
X12/1	Terminal block (circuit 15 unfused)
X26	Interior/engine wiring harness connector
X26/25	Engine/chassis connector (24-pole)

X64/7	Auxiliary fan connector (2-pole)
Y13	Fresh/recirculated air flap switchover valve
Y21	Duovalve
Y21y1	Left-side water valve
Y21y2	Right-side water valve
Z3/11	Circuit 15 (fused) connector sleeve
Z6/3	LH-SFI ground connector sleeve
Z7	Circuit 30 connector sleeve