


MODEL 170 up to 31.5.97

a Transmission window
b Pushbutton

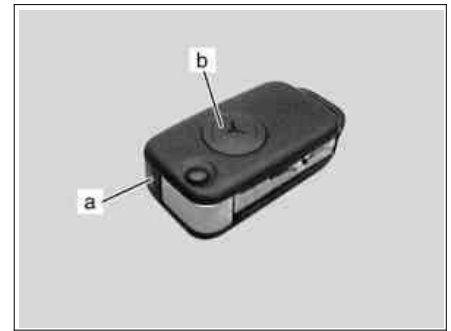

P80.30-0356-01

i	If the car cannot be locked and unlocked, it may be necessary to synchronize the locking system		
1	Point transmission window (a) at infrared remote control (RCL) receiver unit in roof frame		
2	Press pushbutton (b) quickly twice		
3	Turn key in ignition lock to position (2) within the next 30 seconds		